



## **Technical Advisory Bulletin**

Due to the recent launch of Channel Nine's new Digital Channel "Go", some viewers have been experiencing broadcasting issues such as disruption to their viewing of Channel Nine/WIN/NBN.

To resolve this issue, we recommend to perform "Plug and Play" and for instructions on how to do this, please refer to the document below for 2009 models. If you have purchased a TV prior to 2009, please refer to your user manual or alternatively you can visit our Download Centre at [www.samsung.com.au](http://www.samsung.com.au).

If you still experience technical difficulties, please contact the Samsung Customer Care Centre on 1300 362 603.

## Plug & Play Feature

When the TV is initially powered on, basic settings proceed automatically and subsequently.

1. Press the POWER button on the remote control.
  - ✔ The message **Select 'Home Use' when installing this TV in your home.** is displayed.
  - ✔ You can also use the POWER button on the TV.
2. Press the ◀ or ▶ button to select **Store Demo** or **Home Use**, then the ENTER button.
  - ✔ We recommend setting the TV to **Home Use** mode for the best picture in your home environment.
  - ✔ **Store Demo** mode is only intended for use in retail environments.
  - ✔ If the unit is accidentally set to **Store Demo** mode and you want to return to **Home Use (Standard)**: Press the Volume button on the TV. When the volume OSD is displayed, press and hold the MENU button on the TV for 5 seconds.
3. Press the ENTER button. Select the appropriate country by pressing the ▲ or ▼ button. Press the ENTER button to confirm your choice.
4. Press the ▲ or ▼ button to select the channel source to memorize. Press the ENTER button to select **Start**.
  - **Digital & Analogue**: Digital and Analogue channels.
  - **Digital**: Digital channels.
  - **Analogue**: Analogue channels.
  - ✔ The channel search will start and end automatically.
  - ✔ Press the ENTER button at any time to interrupt the memorization process.
  - ✔ After all the available channels are stored, the message **Set the Clock Mode.** is displayed.
5. Press the ENTER button. Press the ▲ or ▼ button to select **Auto**, then Press the ENTER button.
  - ✔ If you select **Manual**, Set current date and time is displayed.
  - ✔ If you have received a digital signal, the time will be set automatically. If not, select **Manual** to set the clock.
6. Press the ▲ or ▼ button to highlight the time zone for your local area. Press the ENTER button. (Australia only)
7. The description for the connection method providing the best HD screen quality is displayed. Check the description and press the ENTER button.
8. Press the ◀ or ▶ button to select **See Product Guide** or **Watch TV**, then the ENTER button.
  - **See Product Guide**: You are moved to the **Product Guide** where you can view the introduction to the main functions of your new HDTV.
  - **Watch TV**: You can watch the set broadcasting channel.



If you want to reset this feature...

1. Press the MENU button to display the menu. Press the ▲ or ▼ button to select **Setup**, then press the ENTER button.
2. Press the ENTER button again to select **Plug & Play**.
3. Enter your 4 digit PIN number. The default PIN number of a new TV set is '0-0-0-0'.
  - ✔ If you want to change PIN number, use the **Change PIN** function. (refer to page 22)
  - ✔ The **Plug & Play** feature is only available in the TV mode.